



## INSTALLING A MASONRY MOUNTED SIGN

### STEP A: PREPARATION

1. To prevent potential difficulties, we STRONGLY encourage you to NOT build your brick mount until you have received the sign and have verified all measurements and PROPERLY ALIGN ALL HARDWARE.
2. Run the electrical through the brick mount to the underside of the sign cabinet on either side of the brick opening. For single face signs the electrical runs to the right side of the sign when facing it.

### STEP B: ERECTION

1. Your sign will arrive with "L" brackets welded to the cabinet as indicated in Figure 2. Corresponding "L" brackets will be set by bolts (provided by customer) into the brick work.
2. Place the cabinet into the brick opening and mark the location of the "L" brackets against the brick work.
3. Remove the cabinet. Attach the "L" brackets to the brick work as illustrated in Figure 3 using your bolts.
4. Replace the cabinet and bolt the "L" brackets together as shown in Figure 3.

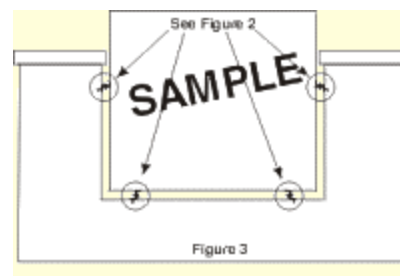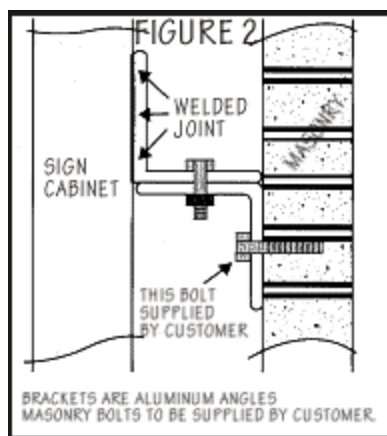

**(800) 237-3928**